



Deano's

MATCHING COMPOSITE GATES




— Ready-made composite gates made to match. —

Sales & Support: 0161 870 4822

Fitting Instructions For Horizontal & Vertical Infill Pedestrian Gate For Wall Mounting


PEDESTRIAN GATE - WALL MOUNTED



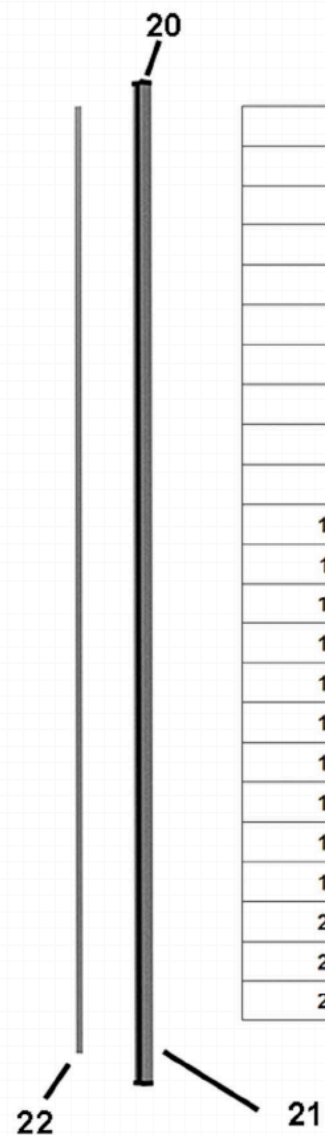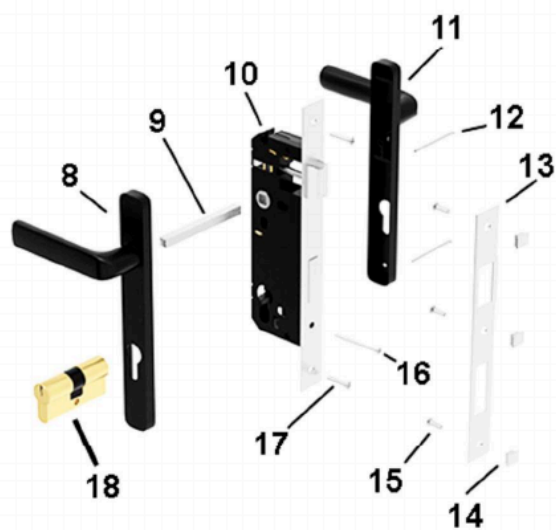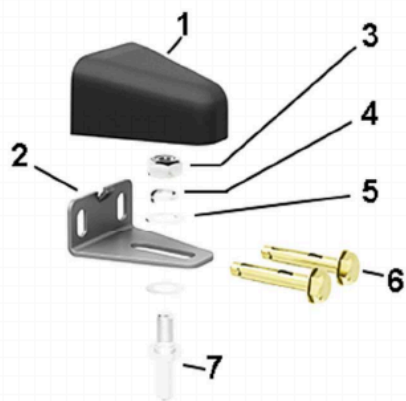

	DESCRIPTION	QTY
1	HINGE COVER	2
2	HINGE BRACKET	2
3	M12 HINGE NUT	2
4	SPRING WASHER	2
5	M12 WASHER	4
6	ANCHOR BOLTS	4
7	HINGE SPIGOT	2
8	HANDLE OUTSIDE	1
9	LOCK SPINDLE BAR	1
10	LOCK MECHANISM	1
11	HANDLE INSIDE	1
12	HANDLE SCREWS	2
13	LOCK PLATE	1
14	LOCK PLATE T-clips	3
15	LOCK PLATE SCREWS	3
16	BARREL LOCKING SCREW	1
17	LOCK MECHANISM SCREWS	2
18	EURO LOCK CYLINDER	1
19	READY MADE GATE	1
20	LOCK KEEP CHANNEL END CAPS	2
21	LOCK KEEP CHANNEL	1
22	LOCK KEEP COVER STRIP	1


1: CHECK WIDTH OF OPENING

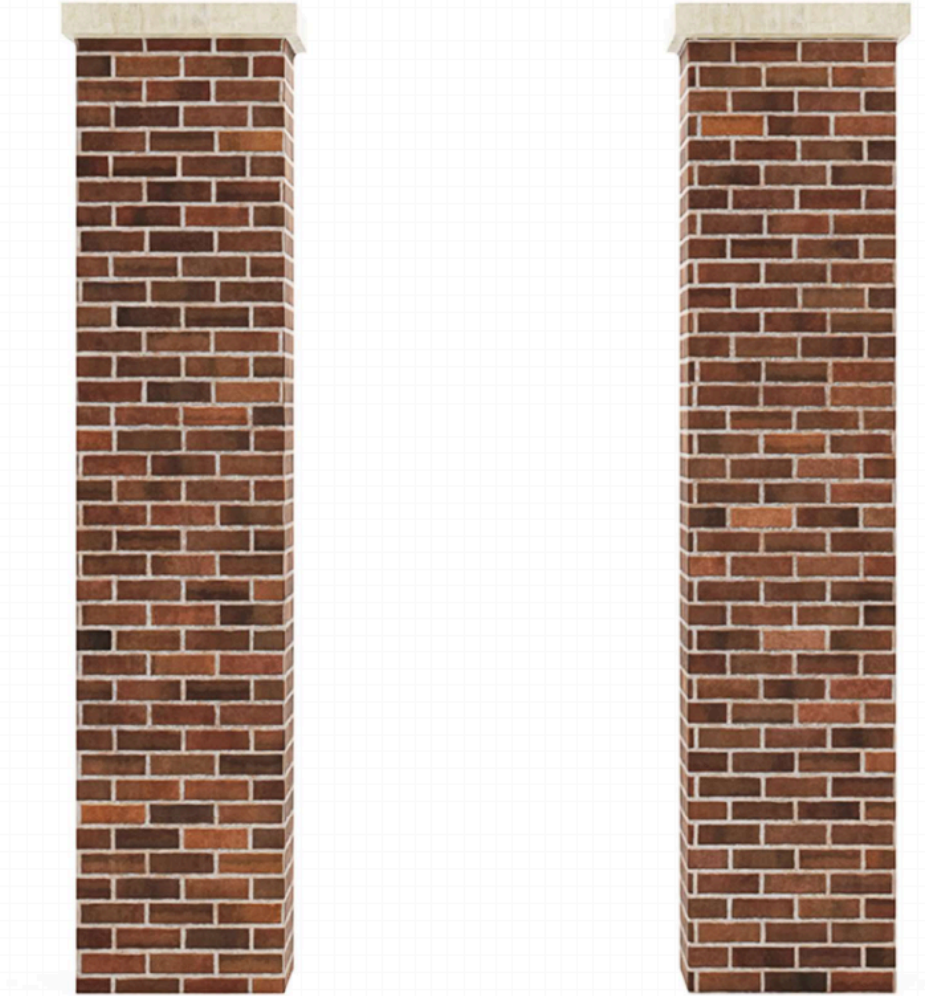

NOTES

- GATE WIDTH +30MM
- CHOOSE LH RH OPENING



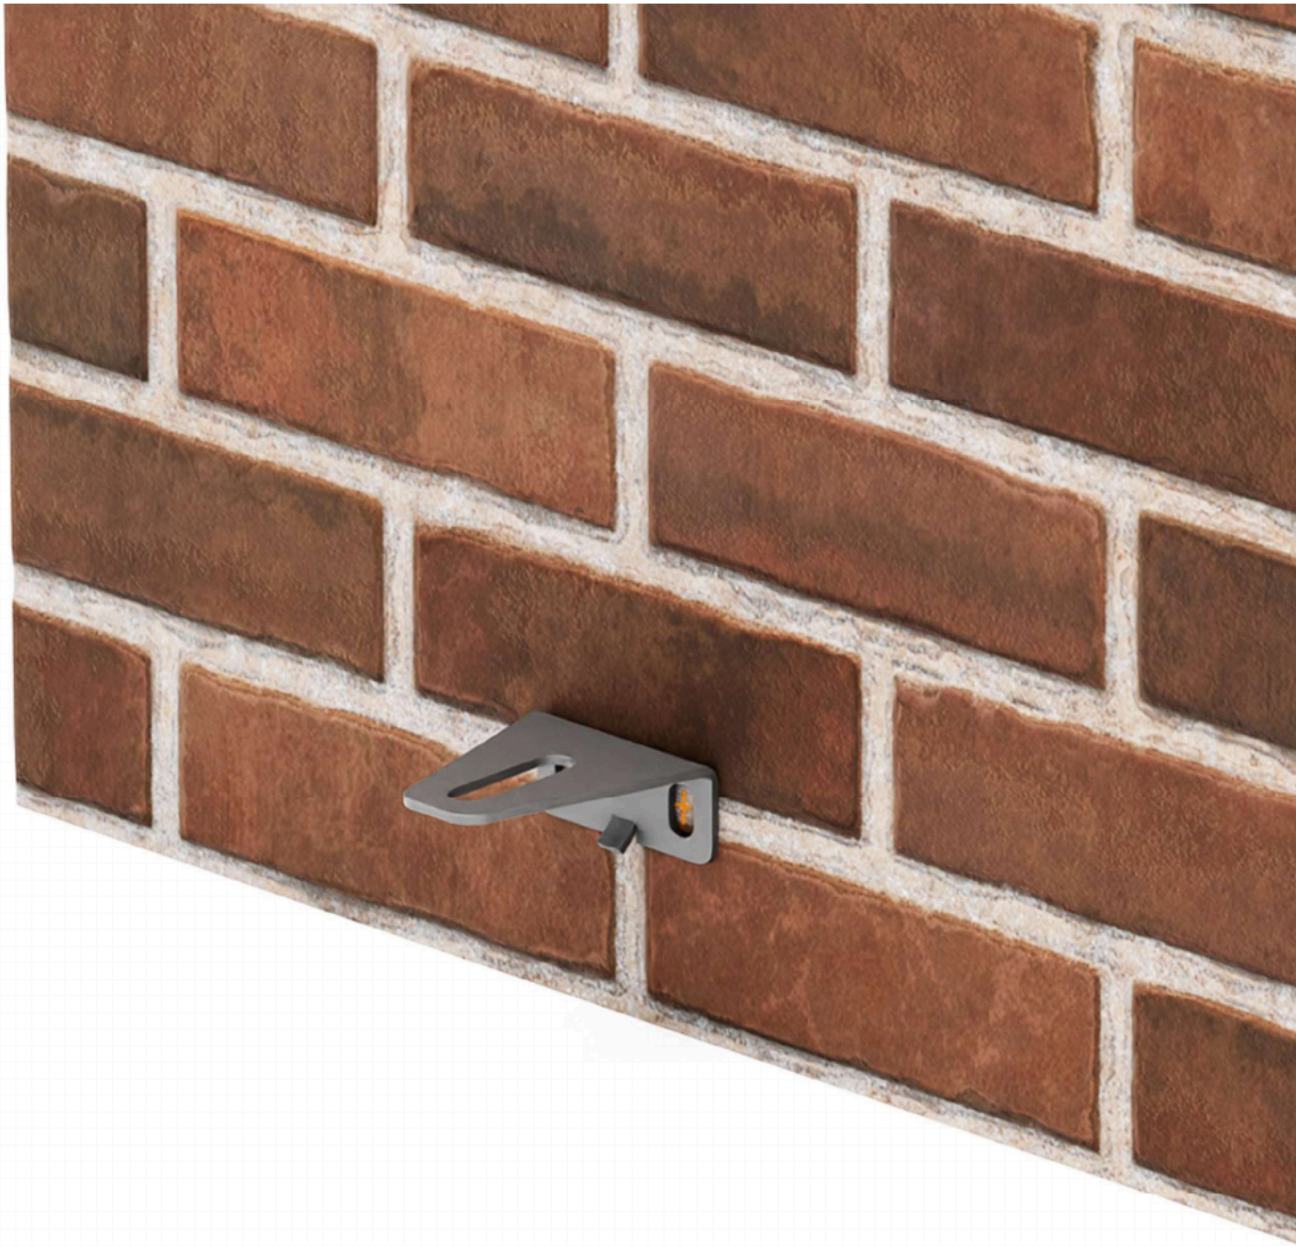

2: MARK LOWER BRACKET

NOTES

- TWO X PLACES



3: DRILL WALL / BRICK




NOTES

- 10MM DRILL BIT
- MIN 50MM DEPTH




4: ASSEMBLE SPIGGOT

A)

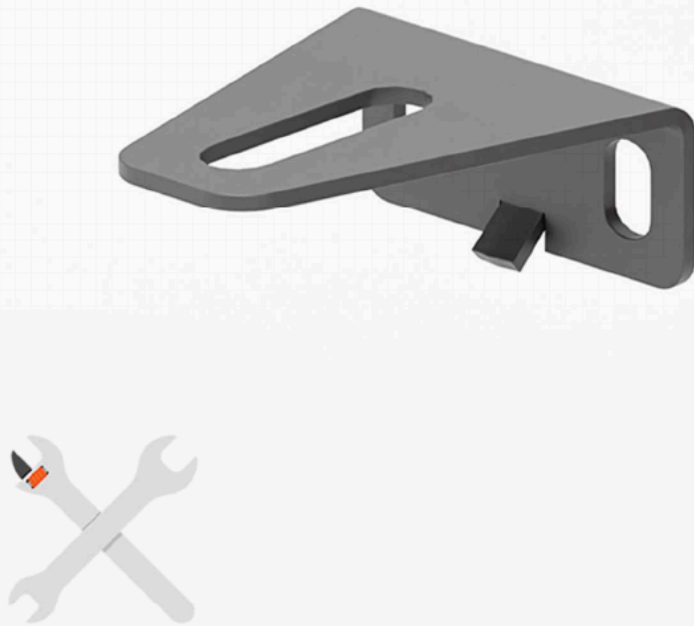

B)

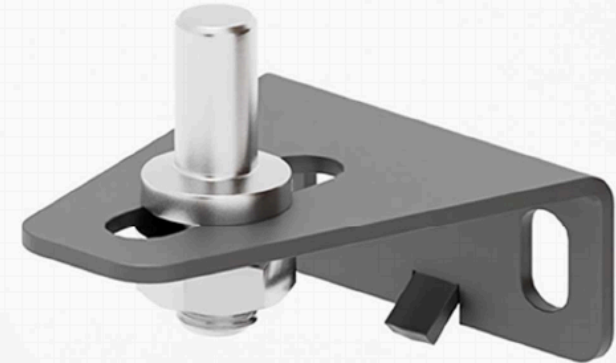

NOTES

- DO NOT OVER-TIGHTEN




5: FIX TO WALL

NOTES


- **M10 X 45MM BOLTS**
- **2 X PLACES**
- **WRENCH OR SOCKET SET**



6: PLACE GATE ON LOWER SPIGGOT

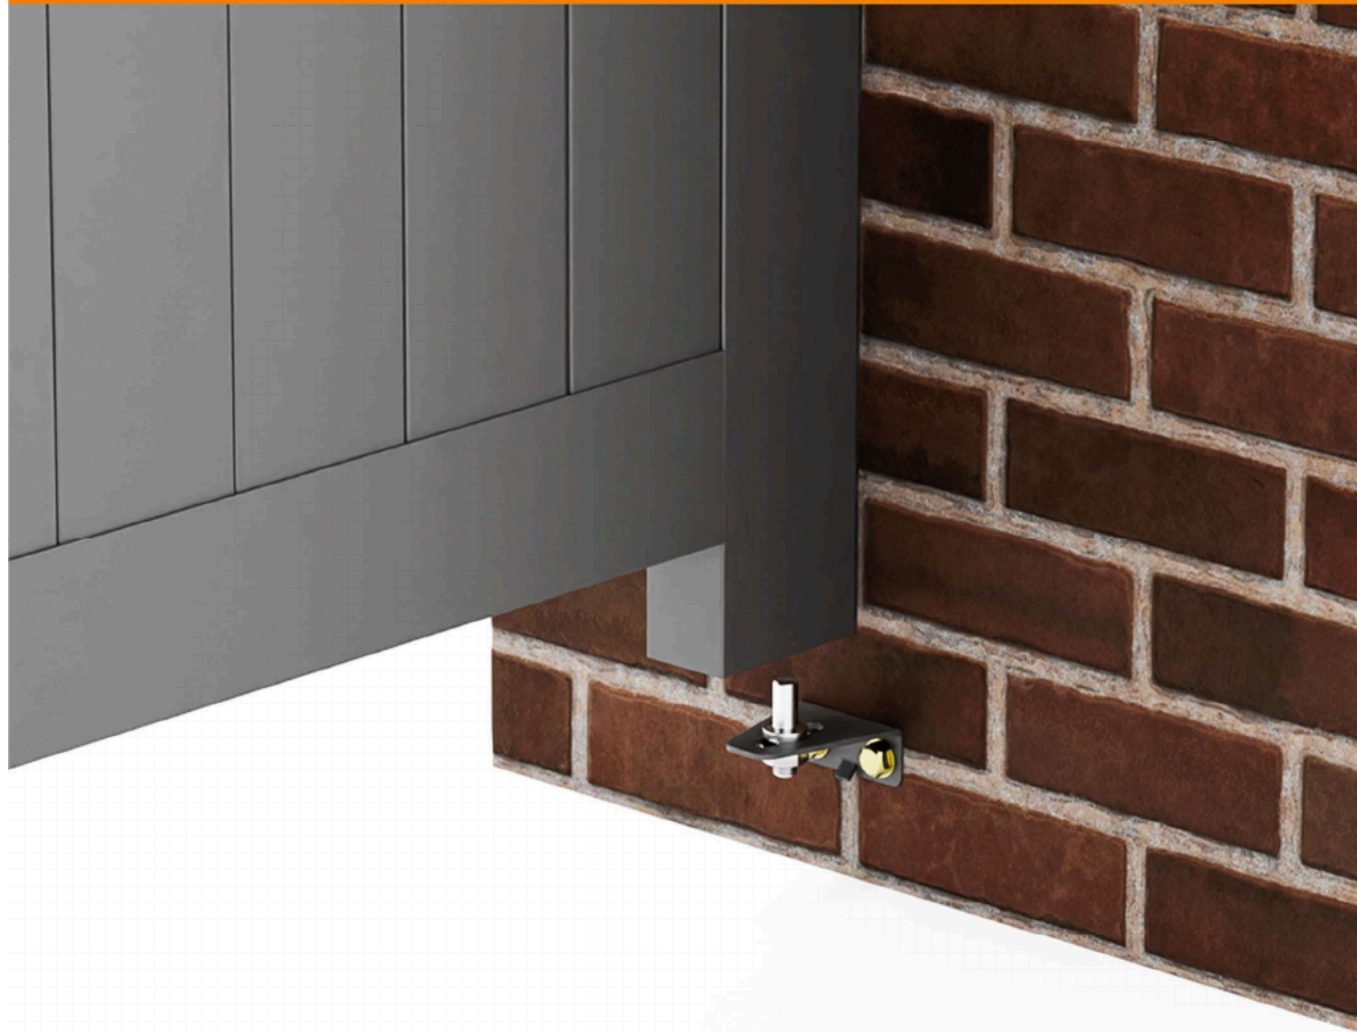

A)

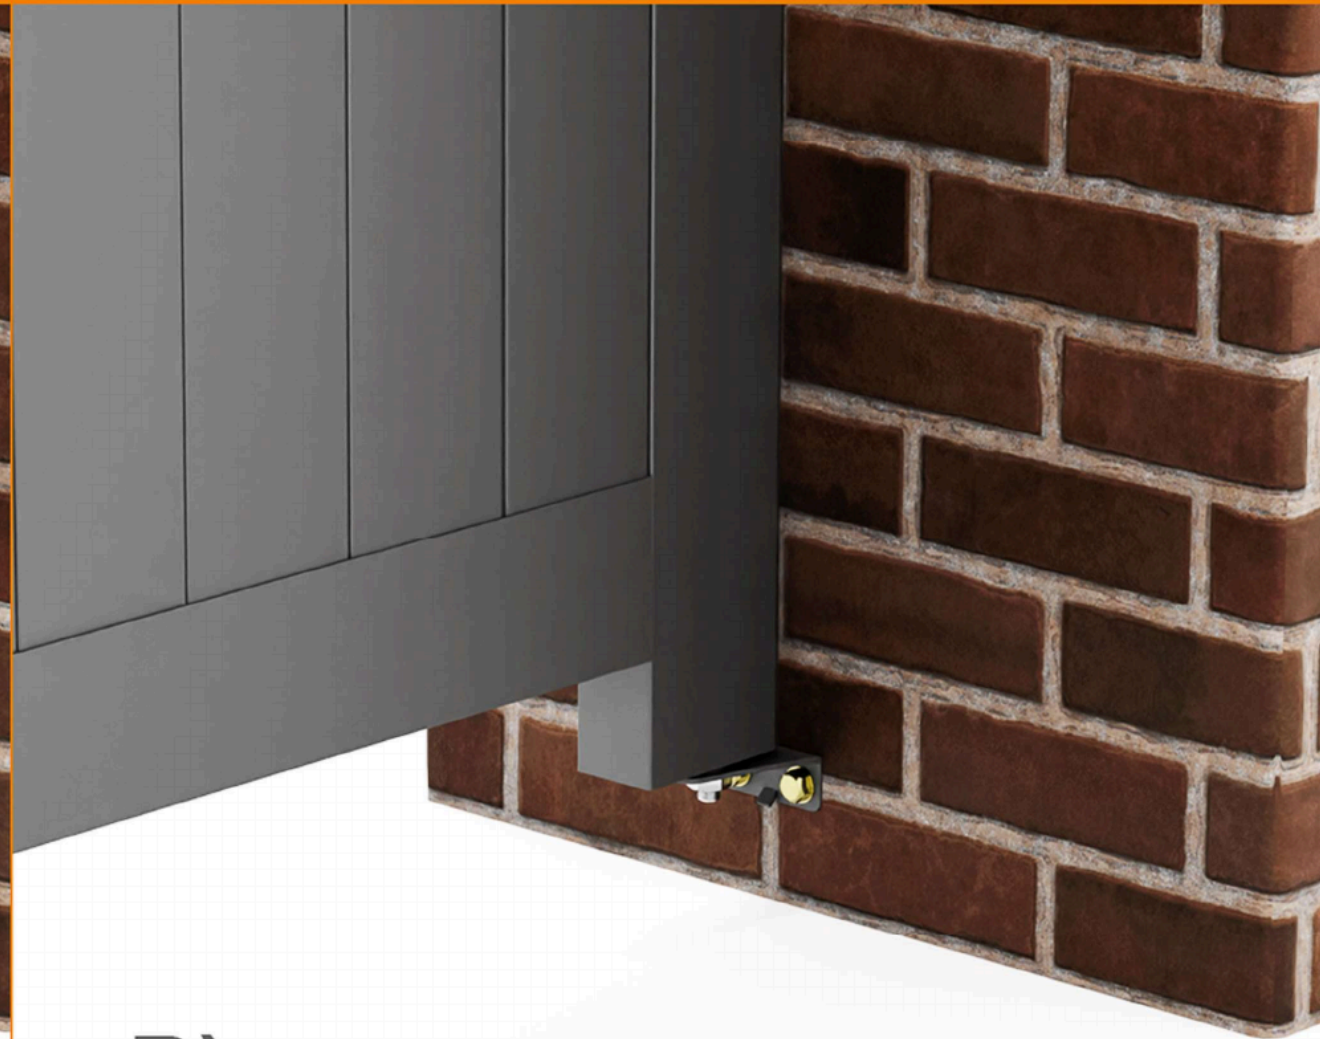

B)

7: ASSEMBLE UPPER SPIGGOT




NOTES

- OPPOSITE TO LOWER BRACKET

8: MARK UPPER BRACKET

NOTES

- HOLD GATE SQUARE
- 2 X PLACES

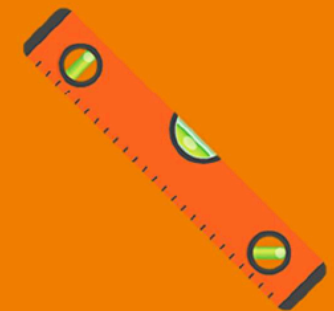



9: DRILL HOLES x 2

NOTES

• **10MM DRILL**

• **50MM MIN DEPTH**

10: FIX TO WALL

NOTES


- M10 X 45MM BOLTS
- 2 X PLACES
- WRENCH OR SOCKET SET




11: LOCK ASSEMBLY




12: SET LATCH DIRECTION

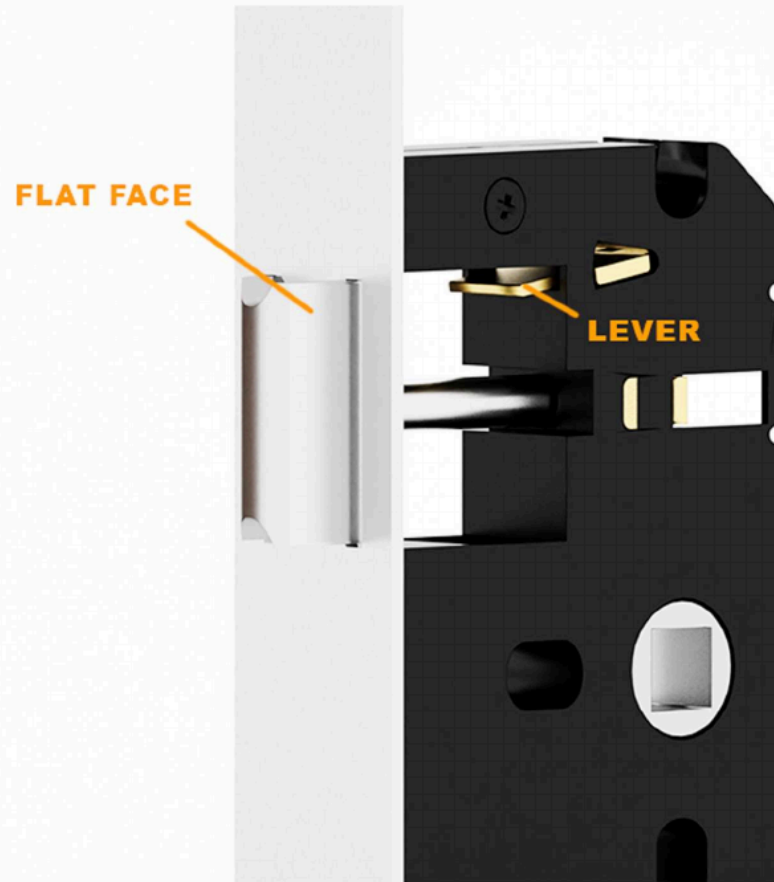

A) SET FLAT FACE TOWARDS
INSIDE OF GATE DIRECTION

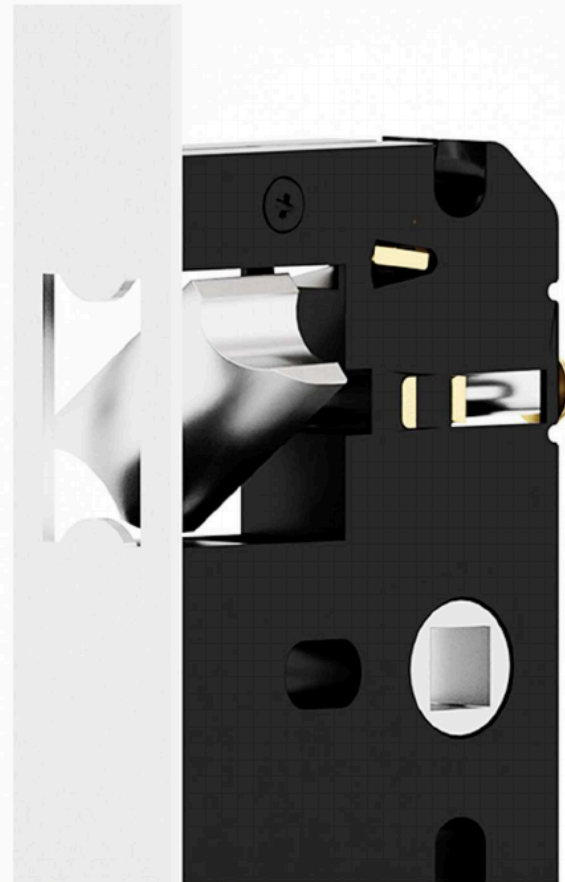


B) TO CHANGE DIRECTION OF
LATCH LIFT LEVER, DEPRESS
LATCH AND ROTATE 180°
INSIDE OF GATE DIRECTION

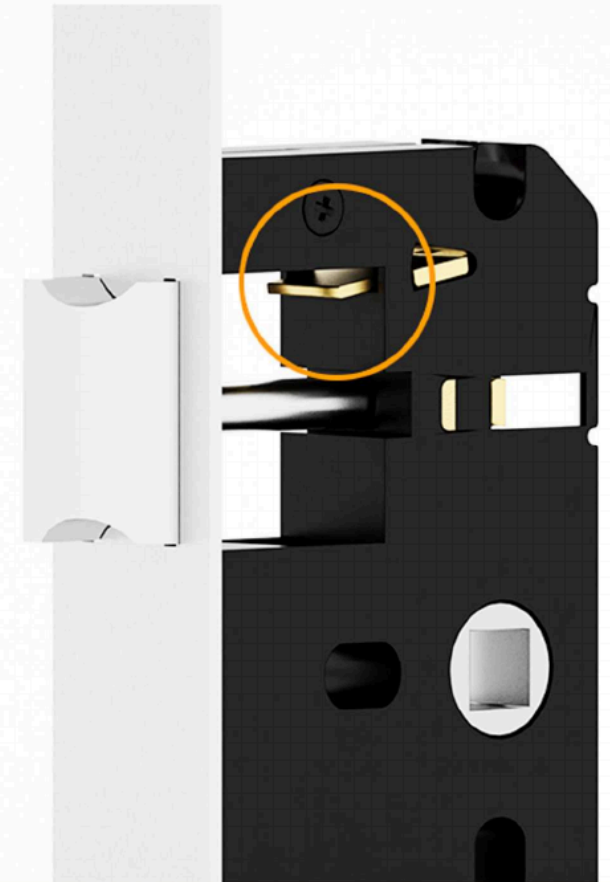

C) ONCE SET ENSURE LEVER
FALLS BACK TO HOME POSITION

13: HANDLE ASSEMBLY

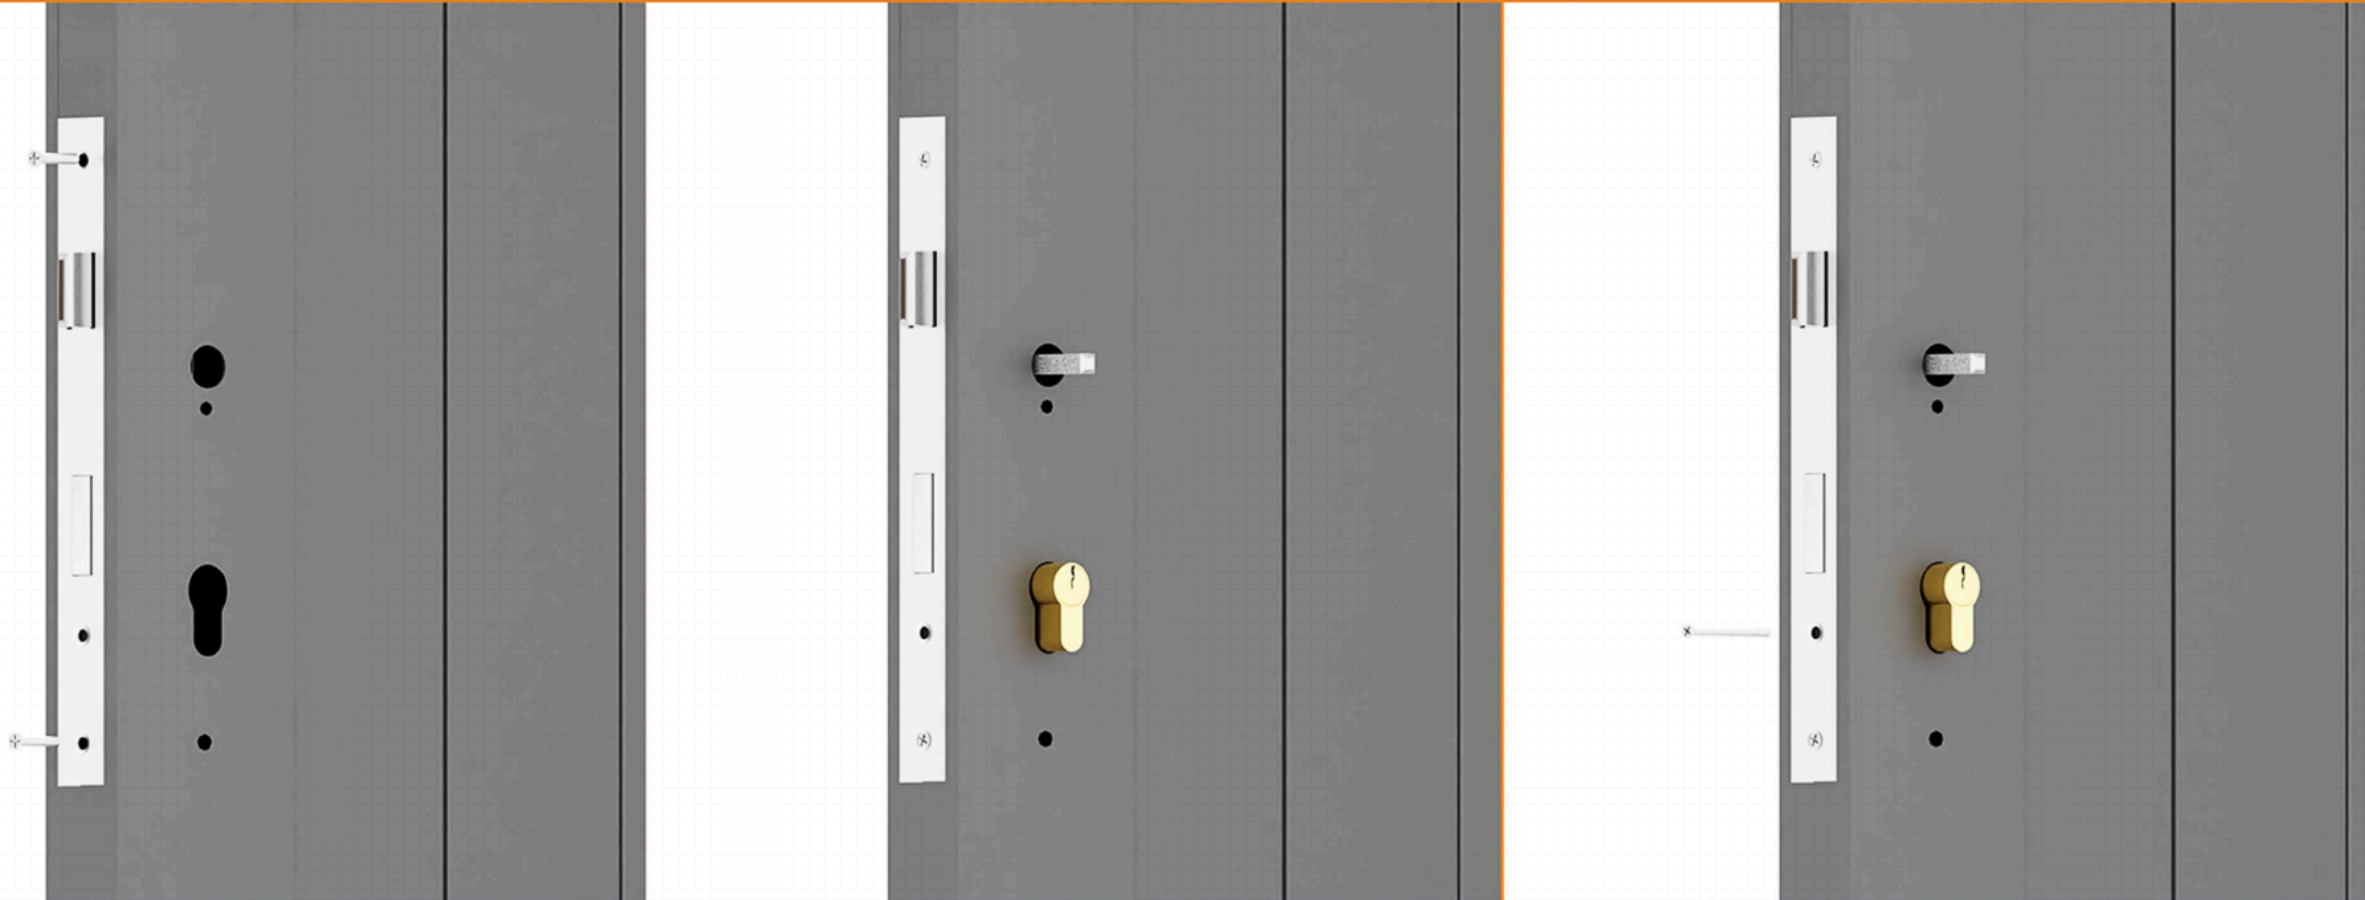


- **M4 X 25MM**
2 PLACES

- **INSERT LOCK**
- **INSERT SPINDLE**


- **M4 X 45MM**
2 PLACES

14: HANDLE

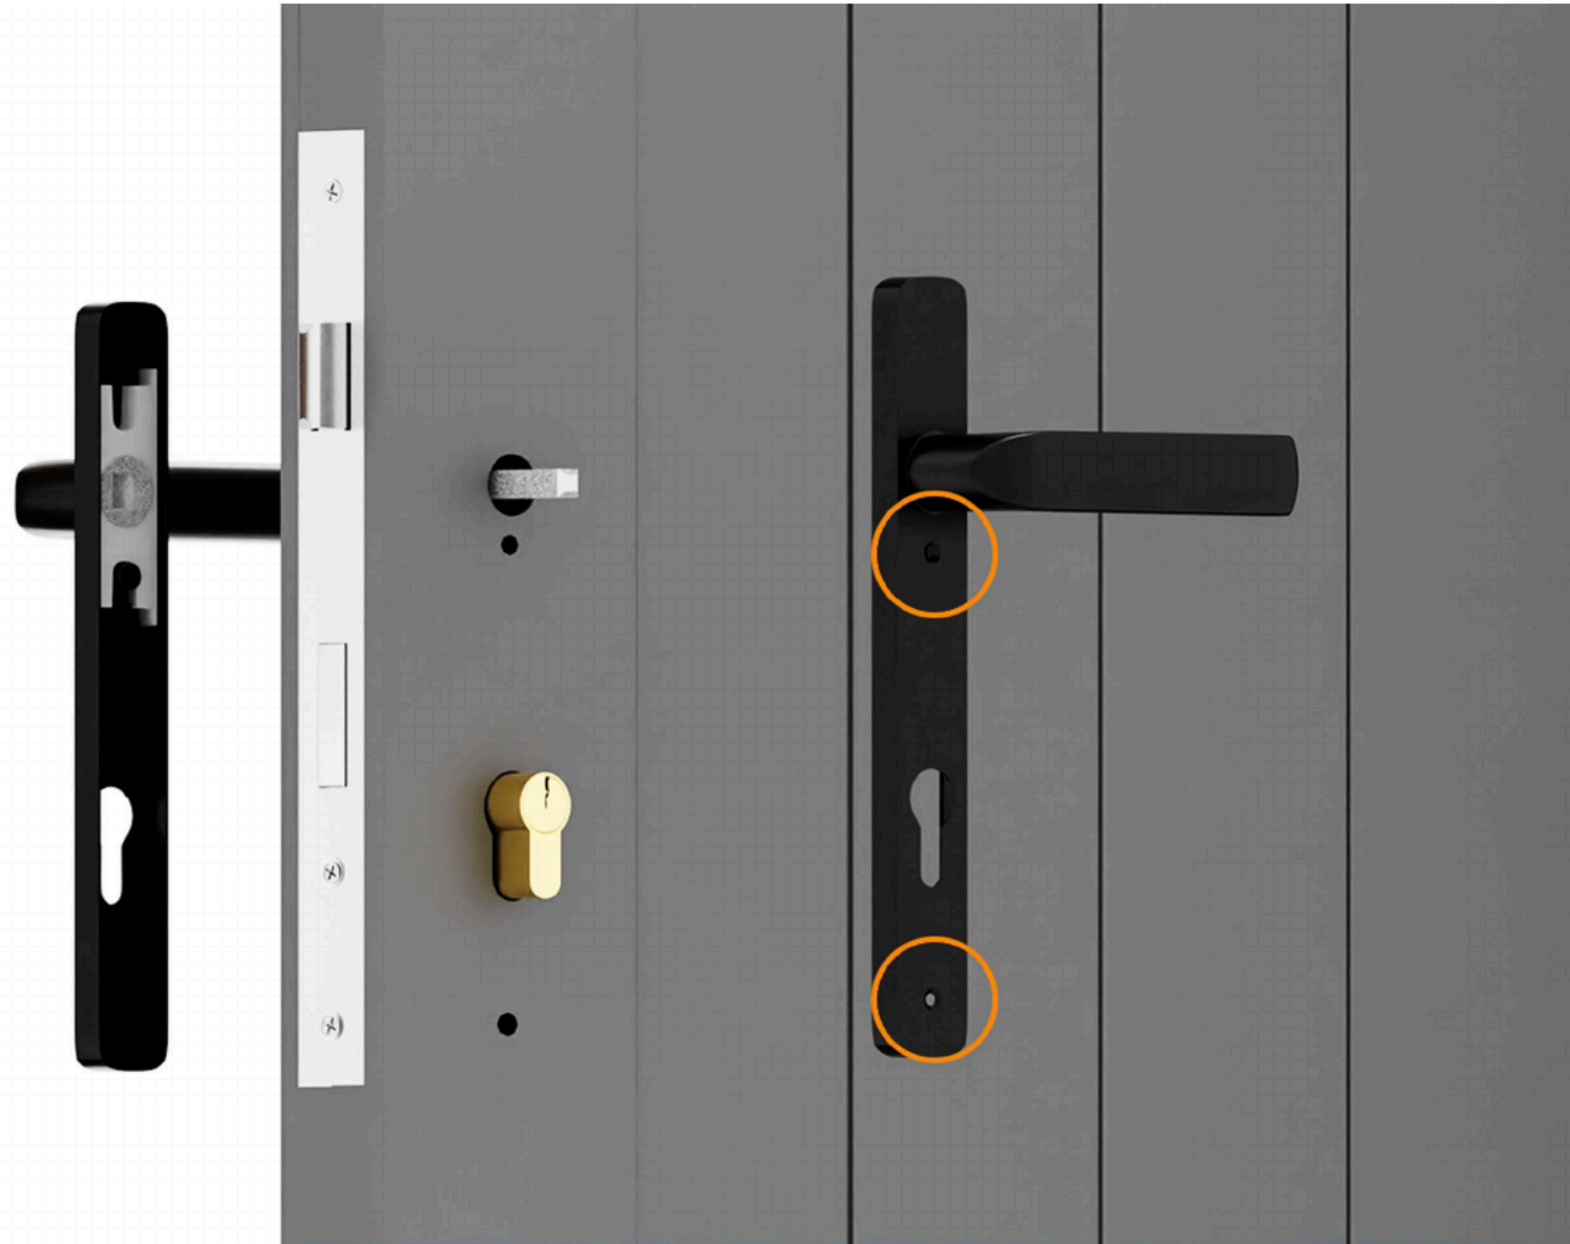

SET LH / RH HANDLE ENSURE FIXING HOLES TO INSIDE OF GATE

15: HANDLE

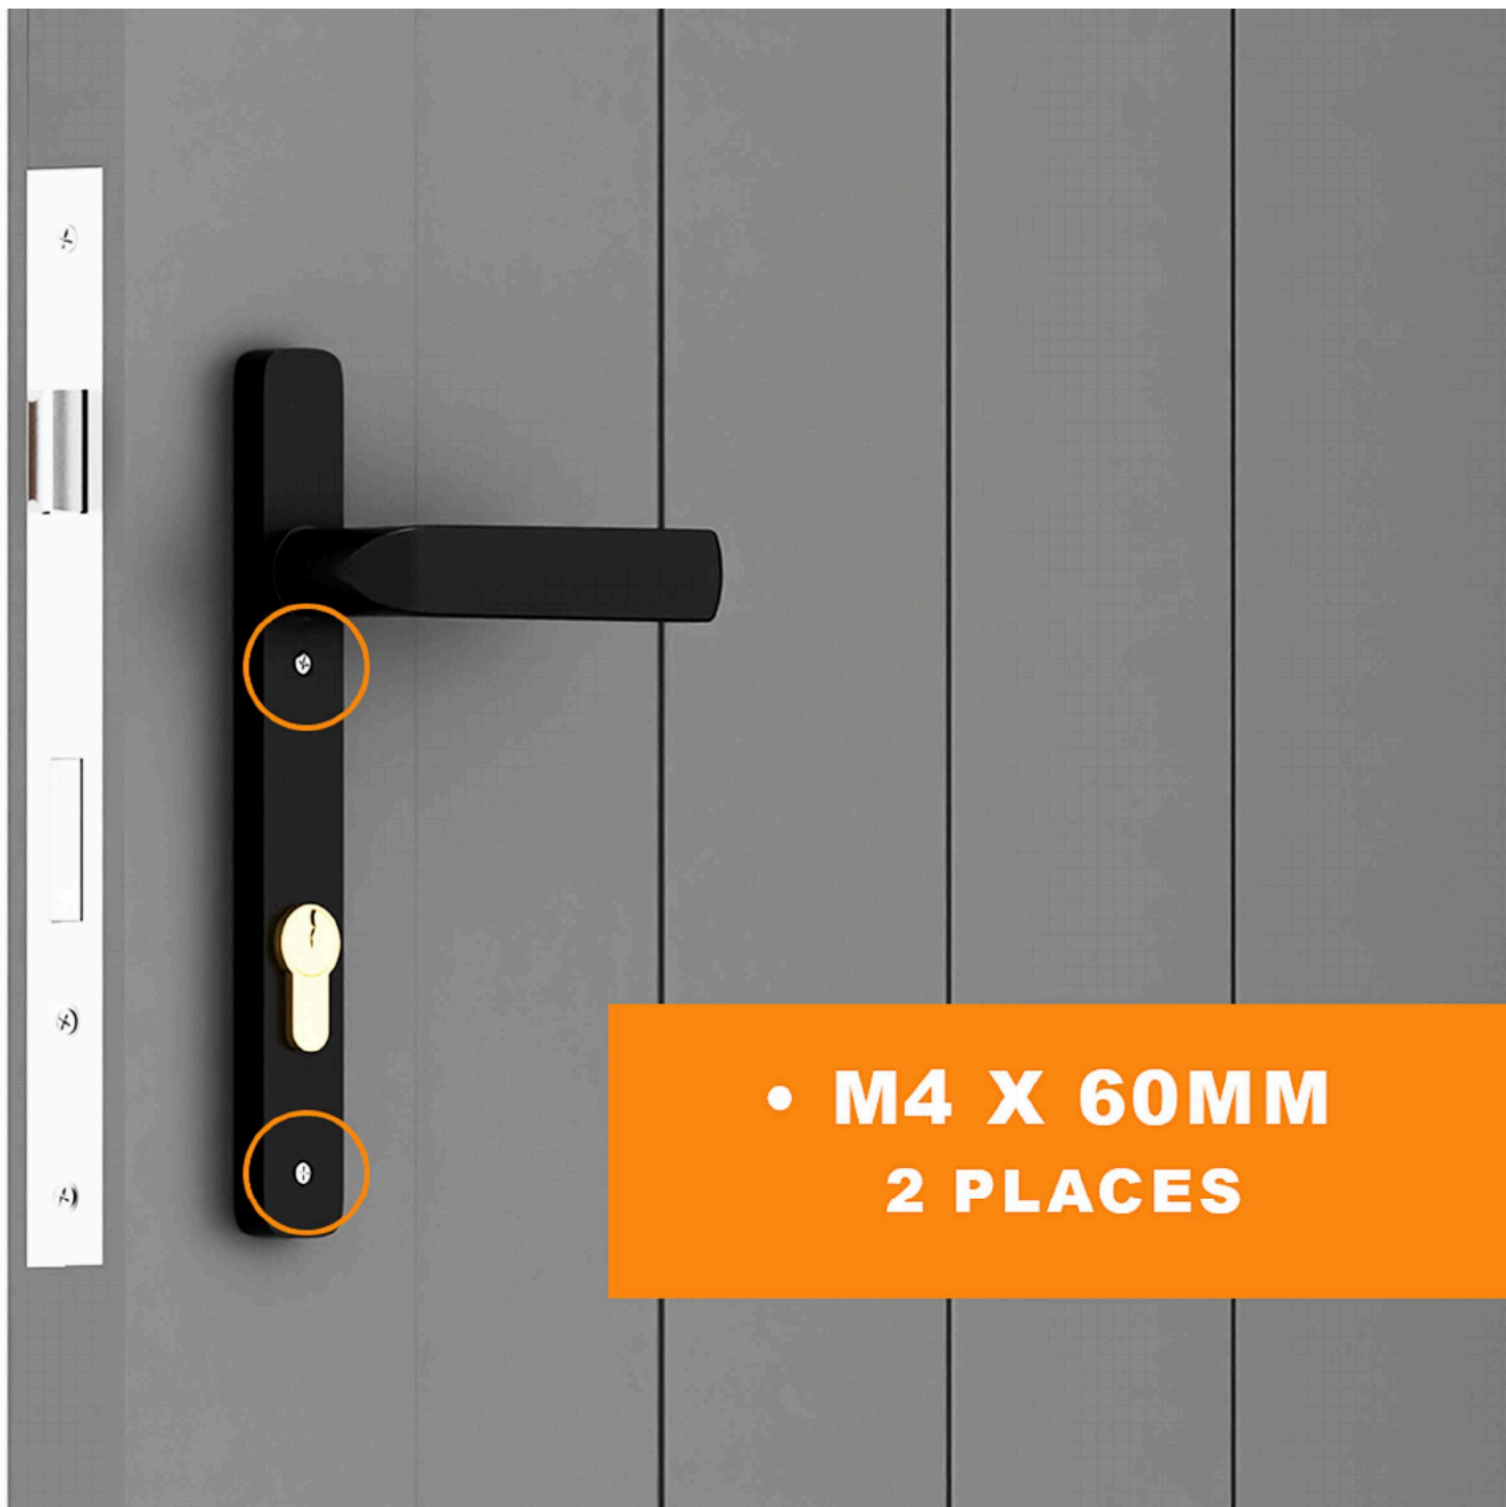

- **M4 X 60MM**
2 PLACES

16: LOCK KEEP



- **LOAD 3 x SCREW BLOCKS**

17: LOCK KEEP

- **INSERT SCREW BLOCKS TO ATTACH THE LOCK PLATE**



18: LOCK PLATE

- **M4 x 15MM**
3 x PLACES






19: MARK LOCK KEEP

NOTES

- **HOLD SQUARE**
- **MARK 3 X PLACES**

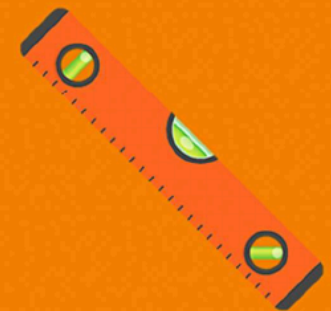



20: FIX LOCK KEEP

NOTES

- 8MM DRILL
- 50MM MIN DEPTH
- 3 x WALL PLUGS
- M6 x 45mm BOLTS






21: ADJUST LOCK KEEP



SET HEIGHT TO LATCH

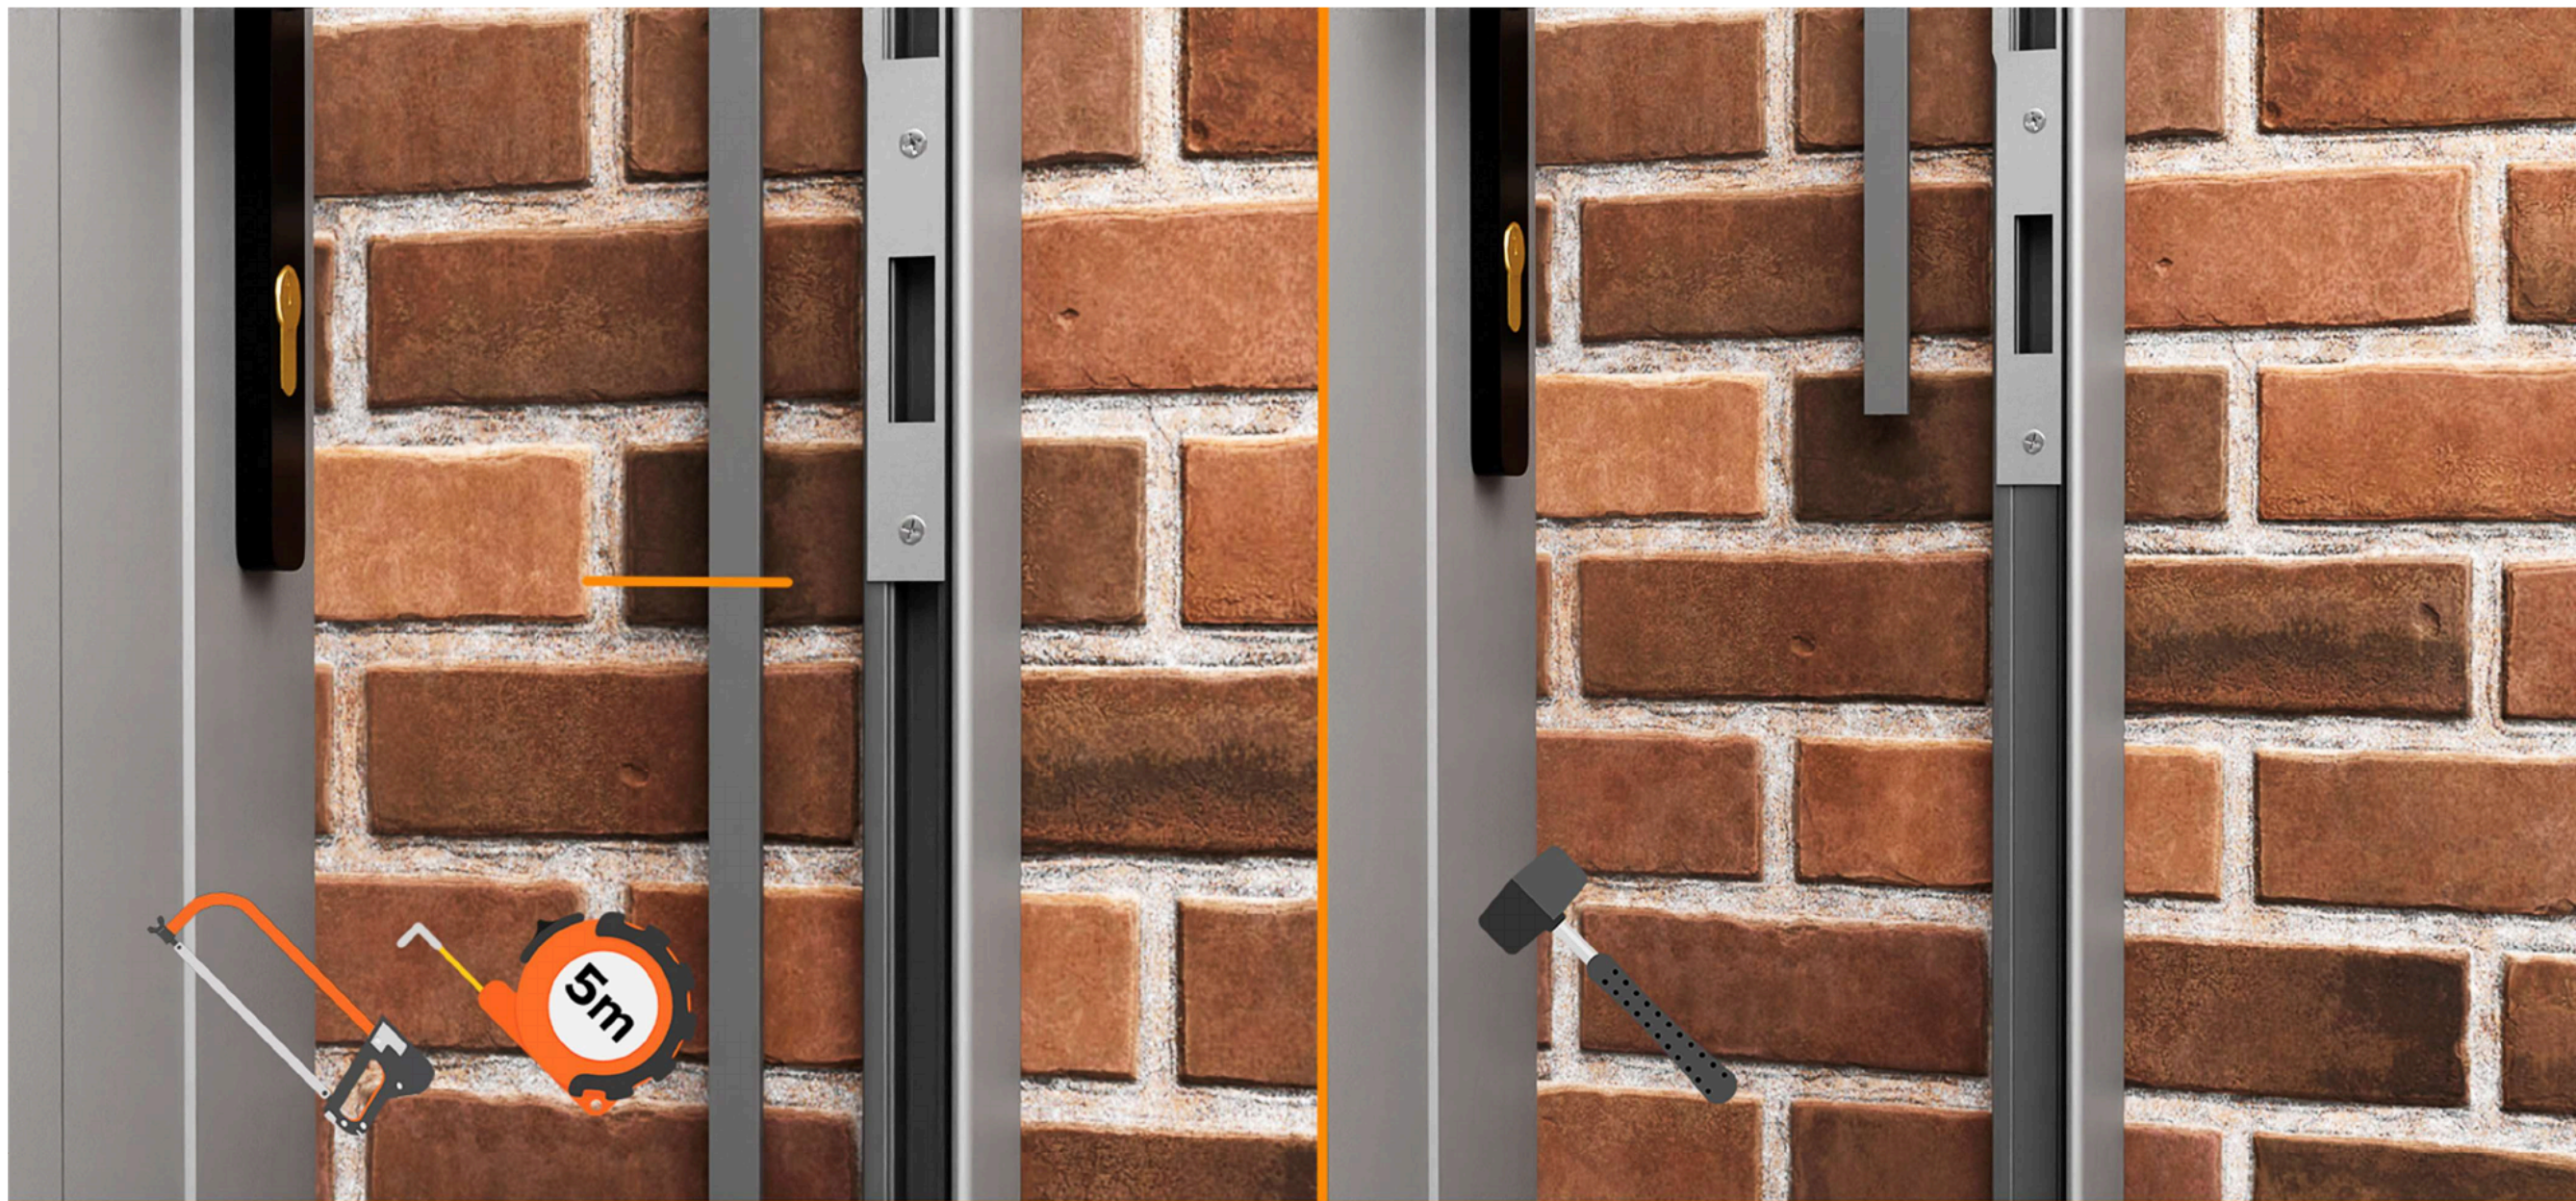

22: CUT COVER PLATE TO LENGTH - 2 x PLACES



23: FINAL ADJUSTMENTS

NOTES

- **SLACKEN BOLTS**
- **ADJUST TO LATCH**
- **2 x PLACES**





24: FIT HINGE CAPS - 2 x PLACES

PROJECT COMPLETE

